
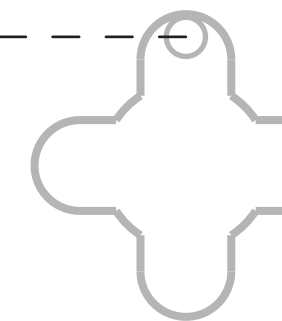


TOP

16 in.

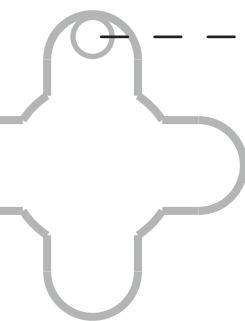

INSTALLATION INSTRUCTIONS

NOTE: Before taping template to wall, use level to ensure template is level. Before drilling holes use a level to make sure the holes marked are level.

Ensure that product is installed in accordance with ANSI/NFPA 70, National Electrical CODE (NEC)

- 1. Tape this template to the drywall.**
Place the template between 2 studs **16" on Center**; ensuring that the marks are **centered on the studs**.
- 2. Mark the location of the holes.**
Use a punch or screw to mark holes in each corner.
- 3. Remove the template and drill the lead holes.**
Use a 1/4" or smaller bit, drill through all the holes marked in previous step.
- 4. Ensure to only use the supplied mounting hardware.**

THIS MUST BE PRINTED ON A 17" W x 11" H SHEET OF PAPER AT A 1:1 RATIO!

Please be sure to check printer settings so no re-sizing occurs.