

Soundweb™ London

BLU-DAN

Installation Guide

5057865-A



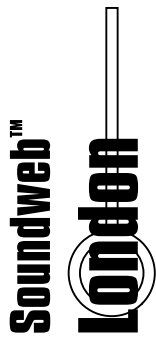


Table of Contents

Regulatory Information.....	1
Product Registration/Warranty	1
Included Items	1
Important User Information	1
Mechanical Installation.....	1
Mounting The BLU-DAN	2
Front Panel	3
COM (Communications) LED	3
STAT (Status) LED.....	3
ERR (Error) LED.....	3
PWR (Power) LED.....	3
Rear Panel	4
AC Mains.....	4
Dante™.....	4
BLU link	4
Locate.....	4
RS232	4
Ethernet.....	4
Technical Specifications.....	5

Regulatory Information

An example of this equipment has been tested and found to comply with the following European and international Standards for Electromagnetic Compatibility and Electrical Safety:

Radiated Emissions (EU):	EN55022:2010
Immunity (EU):	EN55024:2010
Electrical Safety (EU):	IEC60065-01 +AMD 1+ 2
Electrical safety (USA):	UL60065-03



Product Registration/Warranty

To register your product, please visit http://bssaudio.com/en-US/support/warranty_registration.
For warranty information, please visit http://bssaudio.com/en-US/support/warranty_policy.


Included Items

- BLU-DAN BLU Link/Dante™ Bridge
- Power Cord
- Rack Ears w/ 8 Rack Ear Mounting Screws (4 per side)
- 4 Rack Mount Screws & Washers
- Rubber Feet
- Install Guide

Important User Information

Do not remove covers. No user serviceable parts inside, refer servicing to qualified service personnel. For continued compliance with international EMC regulations, it is important that all cables be screened, and connected as follows: Network cables should be of type Cat 5, fitted with a clip-on ferrite sleeve (STEWART TYPE 28A2029-0A0) near the network socket end. This equipment must be earthed. It should not be necessary to remove any protective earth or signal cable shield connections to prevent ground loops. Any such disconnections are outside the recommended practice of BSS Audio, and will render the EMC or safety certificate void.

Mechanical Installation

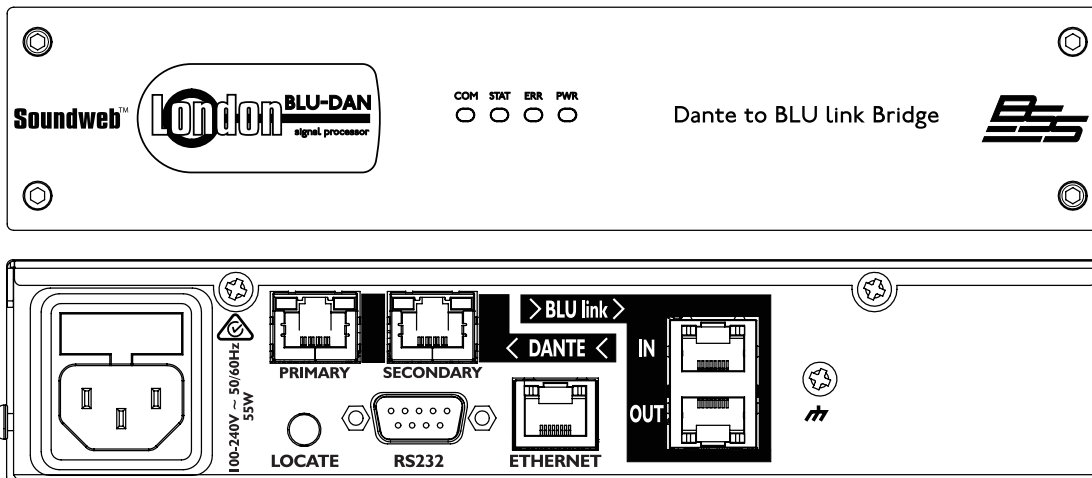


The BLU-DAN must be installed according to the guidelines laid out in this document. Damage caused to the BLU-DAN resulting from a failure to follow these guidelines is not covered by the warranty.


Mounting The BLU-DAN

Rack Mounting



To rack mount the BLU-DAN, first affix the rack ears (included) to both sides of the BLU-DAN using four screws (included) per side. The BLU-DAN can then be installed into a standard 1U rack space using four rack screws and washers (included).

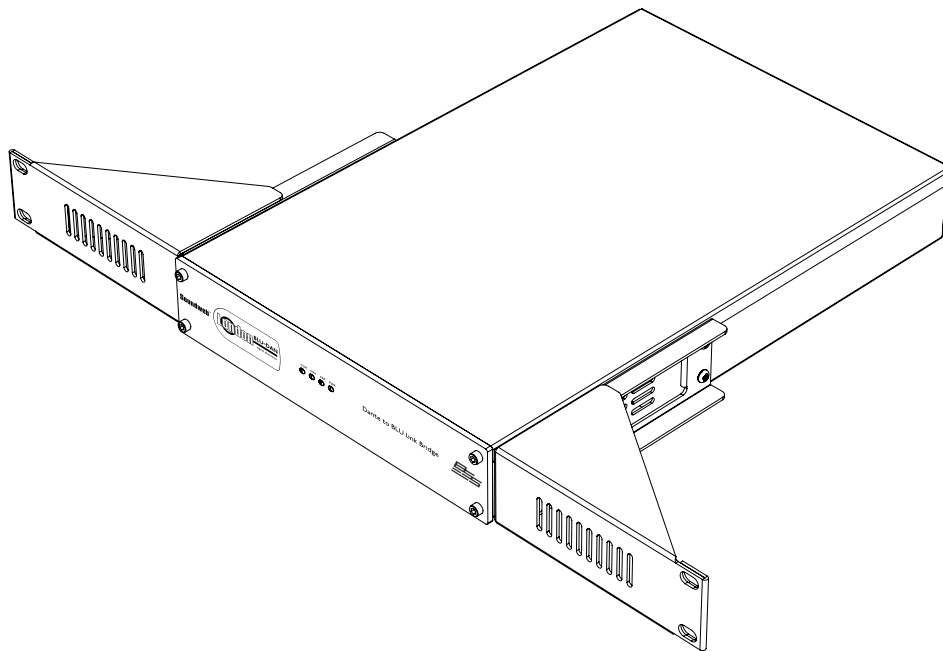

When installing the BLU-DAN into a rack, it is recommended that one empty rack space is left above and below the device. This allows heat to safely dissipate. Furthermore, **DO NOT** attempt to install two BLU-DAN devices side-by-side into the same 1U rack space – doing so will prevent heat from safely dissipating. See the below diagram for further clarification.

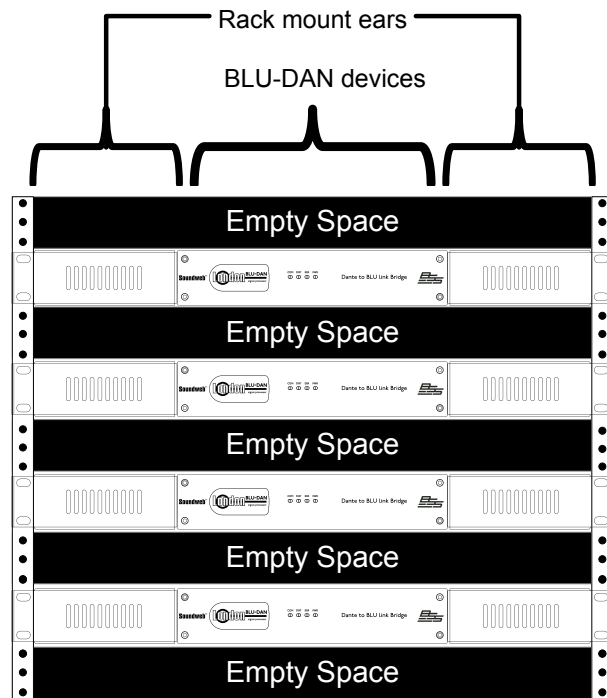

Front Panel

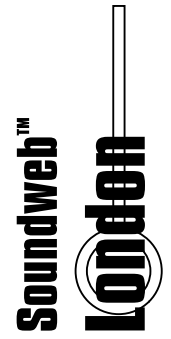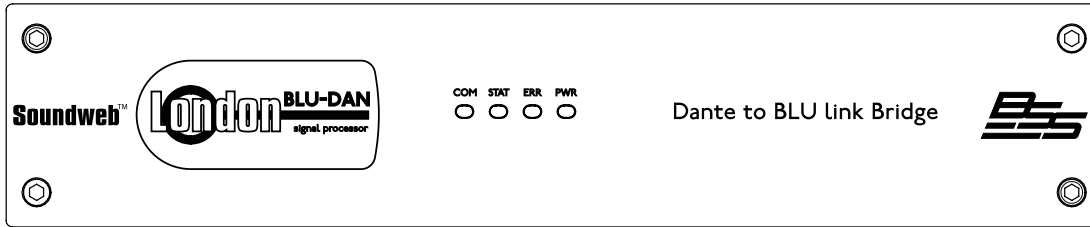

COM (Communications) LED

The COM LED turns green to indicate a normal linked condition. The COM LED blinks green if data is being transferred on the Ethernet or RS232 port. The LED turns yellow if a link is established but no IP address has been established.

STAT (Status) LED

The STAT LED turns green when a valid design file is loaded and running. The STAT LED turns yellow when the design is paused. The STAT LED turns red when the design is stopped.

ERR (Error) LED


The ERR LED is normally off. It turns red in the case of a critical or fatal error.

PWR (Power) LED

The PWR LED turns blue when the device is powered on. It blinks during locate operations (both when pressing the locate button on the rear of the device and also when locating the device from within the design software).



Rear Panel

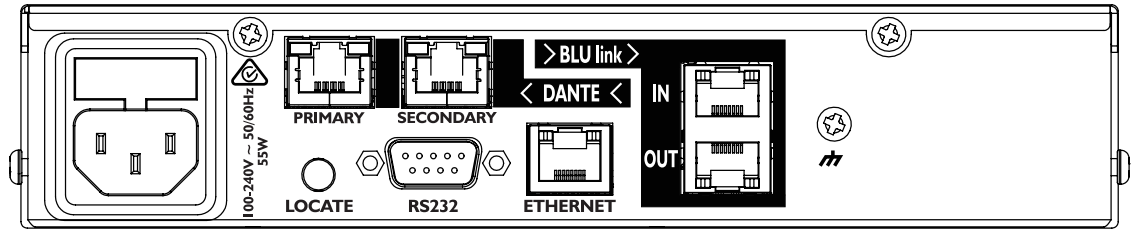

AC Mains

AC Mains input to the universal switched-mode power supply, operates over a wide range of AC input voltages from 100V to 240V, 50/60Hz.

Dante™

Dante is a licensed technology from Audinate®. It uses standard Internet Protocols over 100Mb and/or Gigabit Ethernet and is capable of transporting professional quality, low-latency audio. Dante runs on inexpensive off-the-shelf computer networking hardware and does not require dedicated network infrastructure; Ethernet switches transmit Dante digital media streams alongside ordinary data traffic. The module allows Soundweb London devices to send and receive up to 64X64 channels of audio at 48 kHz (up to 32X32 channels at 96 kHz) to and from other Dante-enabled devices. The module offers a Primary and a Secondary Dante port. The Secondary port can be configured for Switched or Redundant operation using the Dante Controller software. When a device is set for Redundant operation, the device will duplicate Dante audio traffic to both Primary and Secondary Ethernet ports. When a device is set for Switched operation, the Secondary Ethernet port will behave as a standard switch port, allowing daisy-chaining through the device. The physical Dante connections must be made using Cat 5e or Cat 6 cables when using a Gigabit network (Cat 5 may be used for purely 100Mbps networks).

BLU link

The Soundweb London digital audio bus (also informally referred to as “BLU link”) is a point-to-point digital audio bus with 256 audio channels at 48 kHz sample rate or 128 audio channels at 96 kHz sample rate. The physical connection is made with Cat 5e cable from the OUT port of one device to the IN port of another device. The devices are connected in a daisy chain fashion continuing with the OUT port of one device connected to the IN port of the next device. Redundancy can be provided by completing the loop and connecting the OUT port from the last device to the IN port of the first device in the chain. DO NOT connect BLU link ports to a hub, network switch, or router. All devices connected in the BLU link ring/chain must be configured for the same audio sample rate.

Locate

Pressing the Locate switch on the rear of the unit will flash the PWR LED on the front and identify the device within the design software. Similarly the switch will illuminate if the device is selected from within the design software.

RS232

The serial port allows 3rd-party control equipment to control and monitor the BLU-DAN. The BLU-DAN can also send custom serial strings (in Decimal, Hexadecimal, or ASCII format) through the serial port. Therefore, the BLU-DAN can control virtually any device which has a serial port and a publicly available protocol guide.

Ethernet

The main connection for the proprietary system control network. The Ethernet port allows BLU-8v2's, BLU-10's, Contrio Ethernet wall controllers, the design software, iOS devices, and 3rd-party control devices to control and monitor the BLU-DAN. The Ethernet port also allows the BLU-DAN to send and receive design files to and from the design software. The BLU-DAN can also send custom Ethernet messages (UDP or TCP; in Decimal, Hexadecimal, or ASCII format) through the Ethernet port. Therefore, the BLU-DAN can control virtually any device which has an Ethernet port and a publicly available protocol guide.

Technical Specifications

FRONT PANEL LED INDICATORS

LEDs: Control link status and activity for Ethernet and RS-232 connections (COM), Device configuration status (STAT), Error (ERR), Power/Locate (PWR)

CONTROL NETWORK

Connectors: RJ45 Ethernet connector
Maximum cable length: 100m/328ft on Category 5 cable between device and Ethernet switch

BLU LINK AUDIO NETWORK

Connectors: 2 x RJ45 Ethernet connectors
Maximum cable length: 100m/328ft on Category 5e cable between devices
Latency: 11/Fs [0.23ms@48k, 0.11ms@96k]
Pass Through Latency: 4/Fs [0.08ms@48k, 0.04ms@96k]
Maximum Number of Nodes: 60

DANTE™ AUDIO NETWORK

Connectors: 2 x RJ45 connectors
Maximum cable length: 100m/328ft on Category 5 (100Mbps) or Category 5e/Category 6 (Gigabit) cable between devices
Latency: 0.15ms-5.0ms

POWER/TEMPERATURE

Mains Voltage: 100-240V AC, 50/60Hz
Power Consumption: <55VA
BTU Rating: <188 BTU/hr
Operating Temperature Range: 5°C (41°F) to 35°C (95°F)

DIMENSIONS AND WEIGHT

Dimensions: H(U) x W x D = 1.75" (1U) x 8.625" x 13.5" (45mm x 219mm x 343mm)
Weight: 5.3 lbs (2.4 kg)

BSS Audio incorporates high quality mechanical fans in some products. All mechanical fans have a limited life expectancy. We recommend annual inspection of fans for dust occlusion and excessive noise. Fan assemblies should be replaced after six to ten years of use. Environmental factors such as elevated temperature, dust, and smoke can adversely affect fan life. Systems exposed to these conditions should be inspected more frequently. Fan replacement can be performed either at the factory or by an experienced technician in the field. Please contact BSS Technical Support for more information on purchasing replacement parts or product service.

BSS Audio has a policy of continued product improvement and accordingly reserves the right to change features and specifications without prior notice.



Phone: (801) 566-8800

Website: bssaudio.com

Support: bssaudio.com/en-US/support

BSS Audio is a registered trademark of Harman

© 2015 Harman

All rights reserved

Printed in USA